


Distributed by:



www.Jameco.com ♦ 1-800-831-4242

The content and copyrights of the attached
material are the property of its owner.

Connector And Jumper Guide

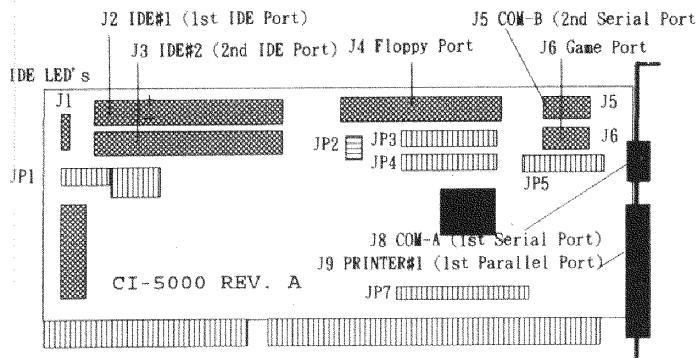

Connector

J1	LED1, LED2 indicators of IDE #1 and IDE #2
J2	IDE#1 (1st Port, designated as Drive C:)
J3	IDE#2 (2nd Port, designated as Drive D:)
J4	FLOPPY (Floppy Port, to Drive A: and B:)
J5	COM-B (2nd Serial Port, COM2)
J6	Game Port
J7	IR (IrDA Port, Optional)
J8	COM-A (1st Serial Port, COM1)
J9	PRINTER #1 (1st Parallel Port, LPT1)
J10	PRINTER #2 (2nd Parallel Port, LPT2)

Jumpers

JP1	PRINTER#2 Selector (to select IRQ#, I/O Port, Modes, DMA# for the 2nd Parallel Port)
JP2	Game Port Selector (to Enable or Disable the Game Port)
JP3	COM-A Selector (to select IRQ#, I/O Port for the 1st Serial Port)
JP4	COM-B Selector (to select IRQ#, I/O Port for the 1st Serial Port)
JP5	IDE/FLOPPY Selector (to Enable/Disable Floppy Port, select IRQ#, I/O Port, ROM BIOS Address for the IDE Ports)
JP6	Reserved for Factory use only
JP7	PRINTER#1 Selector (to select IRQ#, I/O Port, Modes, DMA# for the 1st Parallel Port)

Jumper Settings

JP1 : PRINTER#2 Selector

Jameco Part
Number
138624

